

Congratulation on your new BM PS 15 pump station

BM PS 15 pump station

You have now received your new pump station from Borum.

To ensure the reliability, service and maintenance is very important.

In the manuals you can find the service scheme for your machine,

Parts for first 50 hours service

PS 15

- | | | |
|--------------------|---------------------------|----------------------------------|
| • Oil | 2 litres on engine | (504920) Q8 FS 10W-40 or similar |
| • Oil filter | 1 pc. on engine | (503151) |
| • Fuel filter | 1 pc. on engine | (503152) |
| • Hydraulic filter | 1 pc. on Hydraulic system | (500490) |

Boiler

- | | | |
|---------------|---|----------|
| • Fuel filter | 1 pc. to each oil burner <u>(only if mounted)</u> | (500413) |
|---------------|---|----------|

Remember to check all air filters regularly (replacement schedule can vary from different work conditions)

(It is important to have the first service check very early, because when starting up the circuit is cleaning it self and all the impurities can cause clogging of the filter with the risk of too low lubrication and flow)

Please remember to read the manual before using the machine.

In the service scheme you will also find the daily checks you must remember.

The next service must be done by 250 hours.

Parts for every 250 hours

Use same parts as for the first 50 hours service.

Borum Industri A/S, Højvangsvej 10,
Hadbjerg, DK-8370 Hadsten, Denmark, CVR nr. DK 19085694
Tel: + 45 87 613 213, Fax: + 45 87 613 214,
www.borum.as • e-mail: info@borum.as



– it's straightforward

Congratulation on your new BM PS 15 pump station

Parts for every 1000 hours / 6 months

PS 15

- Oil 2 litres on engine (504920) Q8 FS 10W-40 or similar
- Oil filter 1 pc. on engine (503151)
- Air filter element 1 pc. on engine (510693)
- Fuel filter 1 pc. on engine (503152)
- Hydraulic filter 1 pc. on hydraulic system (5000490)
- Oil 65 litres on hydraulic system (503626) Q8 HANDEL 46 or similar

Change of the hydraulic oil can depend of environment, check the oil before changing.

Remember to check all air filters regularly (replacement schedule can vary from different work conditions)

Boiler

- Fuel filter 1 pc. to each oil burner (only if mounted) (500413)

We recommend doing the following minimum each year:

PS 15

To check/renew coolant

Boiler

To change heat oil, and make service on the oil burner

- Heat oil Litres depending of size (only on ID boilers) (500383) Q8 GLUCK H or similar
- Nozzle 1 pc for oil burner (only if mounted)

Size of nozzle is depending of boiler type see manual for burner

We recommend doing the following minimum every two years:

PS 15

To change belt

- V-belt 1 pc. for generator on engine (503146)

To change water and fuel pipes clamps

To change fuel pipes and clamps

Borum Industri A/S, Højvangsvej 10,
Hadbjerg, DK-8370 Hadsten, Denmark, CVR nr. DK 19085694
Tel: + 45 87 613 213, Fax: + 45 87 613 214,
www.borum.as • e-mail: info@borum.as



– it's straightforward